

# Manual for a smartinterface used with Mac OS/X Version 10.6 (Snow Leopard) or Higher

To read out your dive computer with an Apple PC you need to download a software, which is not provided by Suunto or Mares. Our recommendation: **MacDive!**


To download a free of charge trial version of MacDive follow this link: [Click here](#)

To download the driver for your smartinterface follow this link: [Click here](#)

On the CD, which is delivered with your smartinterface, the driver is also provided.




1.0 First, install the downloaded driver.

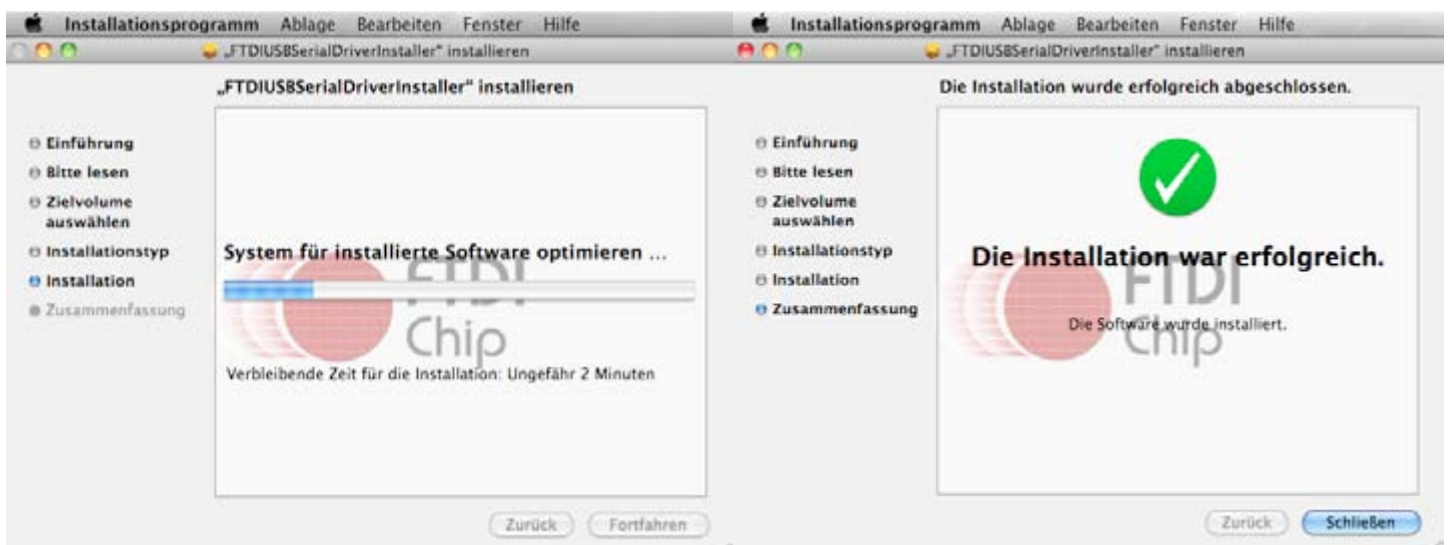


## Manual for a smartinterface used with Mac OS/X 10.6 or higher

2.0 Open the **System Profiler** Utility in the **Applications** folder.

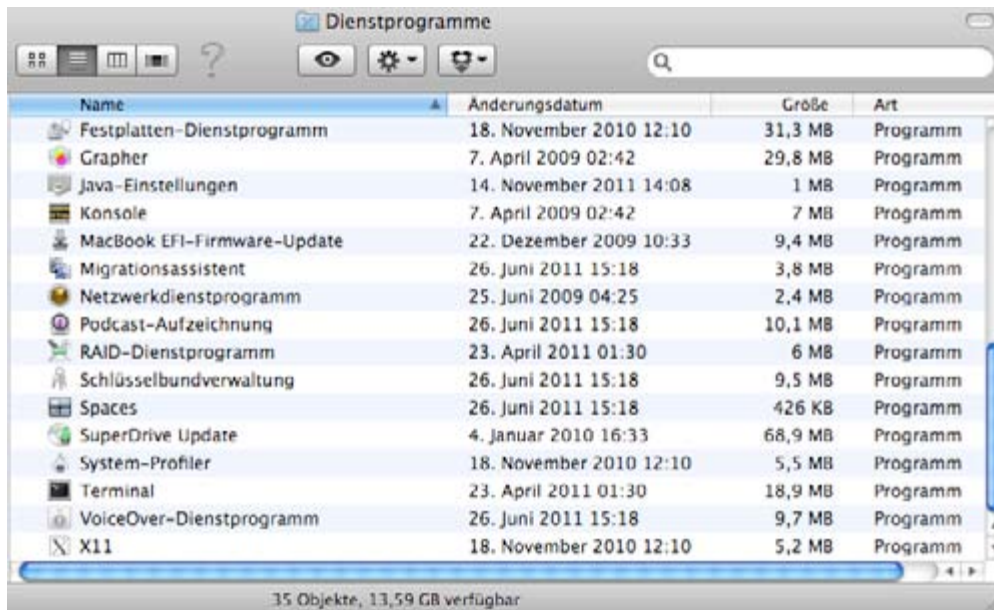


3.0 Plug your interface into a USB port, then click on **USB** in the System Profiler's hardware overview on the left side.

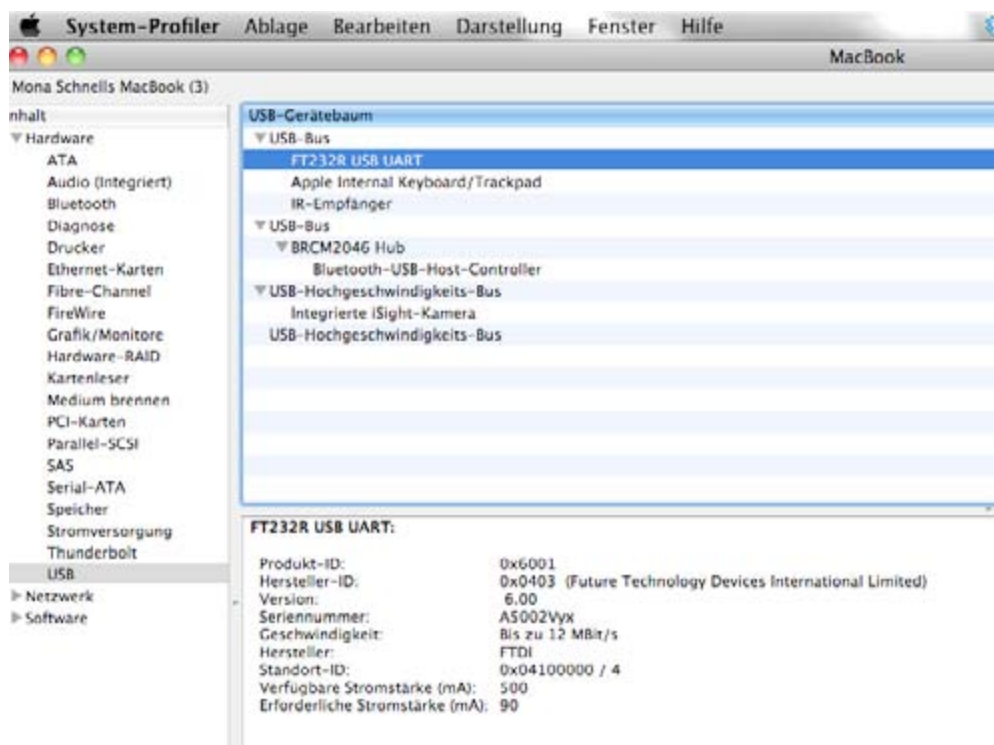


4.0 Press **CMD+r** to renew the view and the interface will be displayed as **USB <-> Serial Cable** or **FT232R USB UAR** on the right side.

## Manual for a smartinterface used with Mac OS/X 10.6 or higher


5.0 Start MAC Dive in the Applications folder. Then click on **Mac-Dive** (in the menu bar) and select **Preferences**.

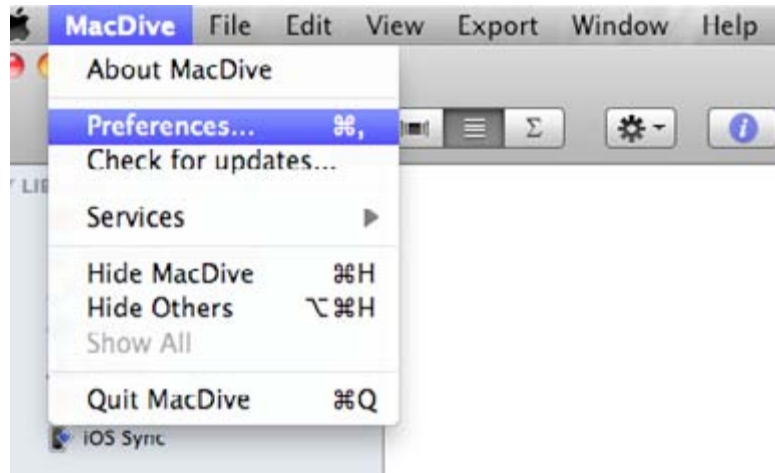

6.0 Click on **Advanced**, scan for and select serial port, then close the window.

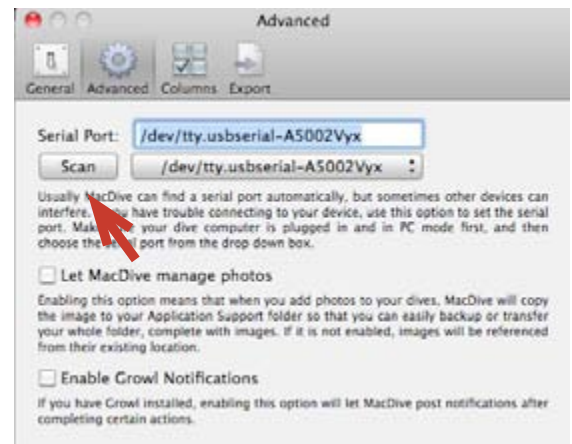

7.0 Click on the arrow next to the gear wheel and select **'Download Dives'**. Then click on **Import**.

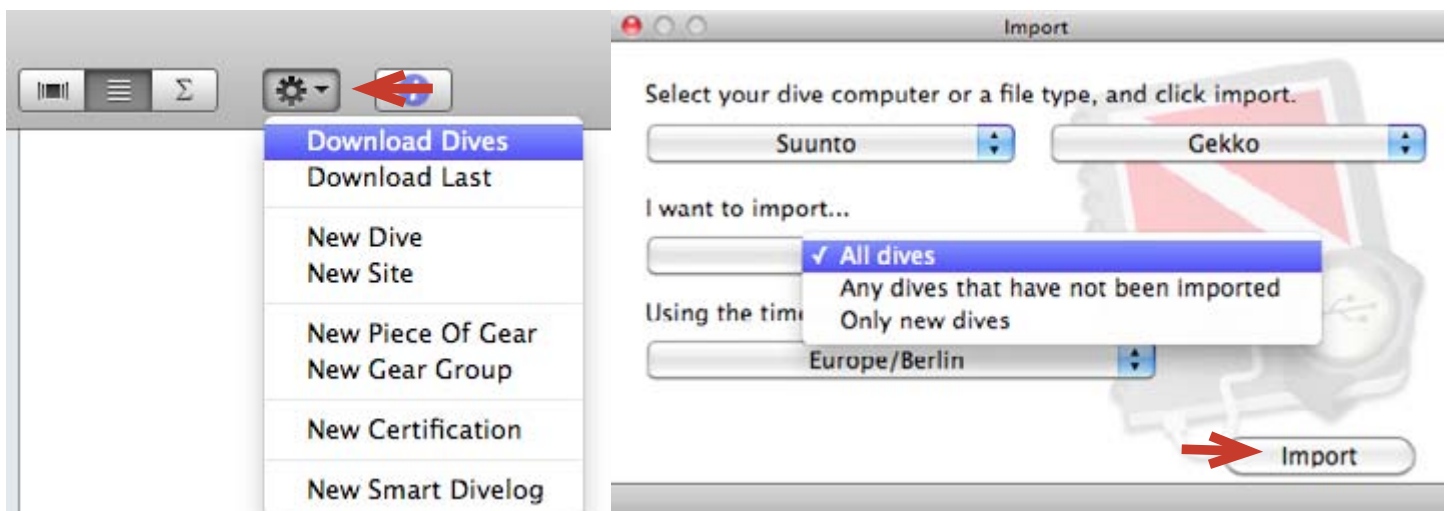

8.0 Dives will be displayed after the download.