Instructions
Lunette Wrench Kit
for Citizen Aqualand 500

Instructions – Lunette Wrench Kit

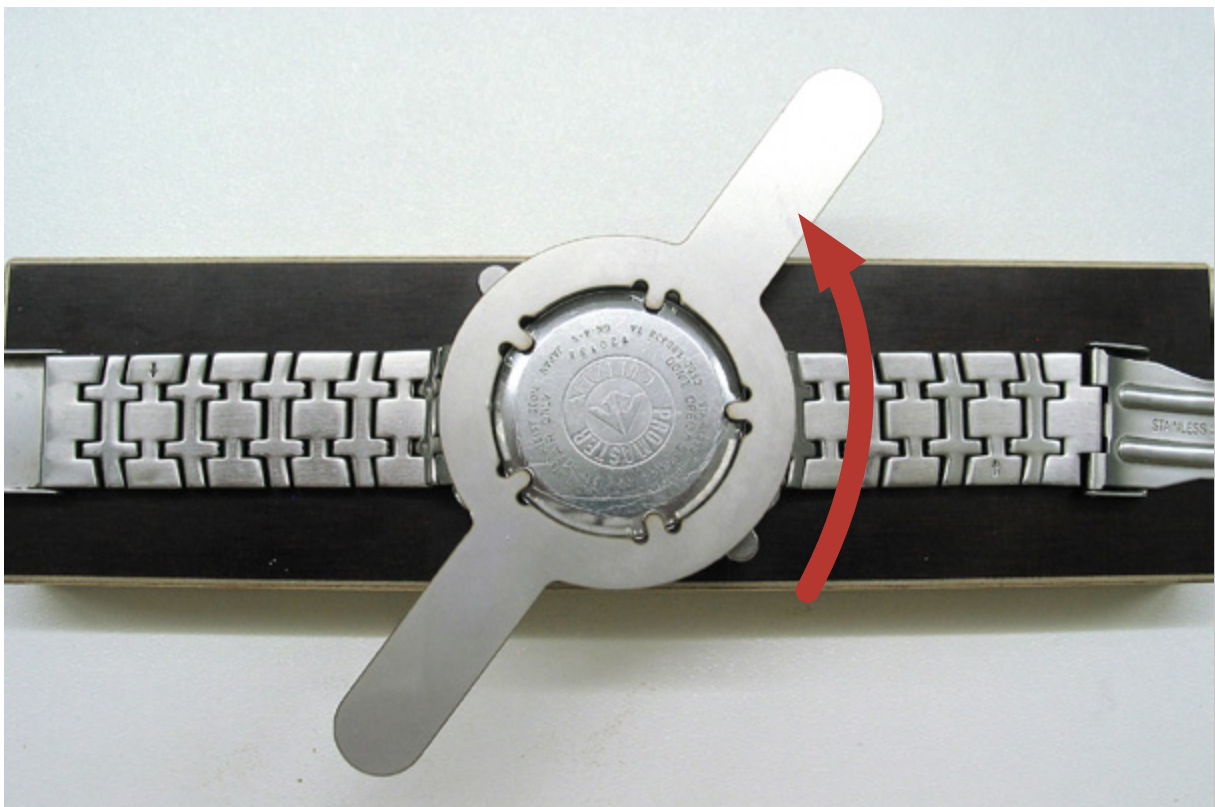This lunette wrench kit contains a lunette wrench, a workbench, a sealing ring and new battery.

The wrench allows you to easily replace the battery of a Citizen Aqualand C500. The included „workbench" makes the process of replacing the battery particularly simple. Simply place your dive computer between the 4 metal pins as depicted in the photograph on page 2. This will ensure the computer will be held firmly in place and allow you to unscrew the lunette with the special wrench. Replace the old battery and sealing ring with the new ones, and use the wrench again to screw the lunette back on.

Important! Make sure to work very carefully and in a calm environment on a clean work surface.
Please note: Use a lint-free cloth for the cleaning process e.g. clean wipes for glasses.

Lunette Wrench Kit for Aqualand C500

1.0 Place dive computer between the four pins of the „workbench".
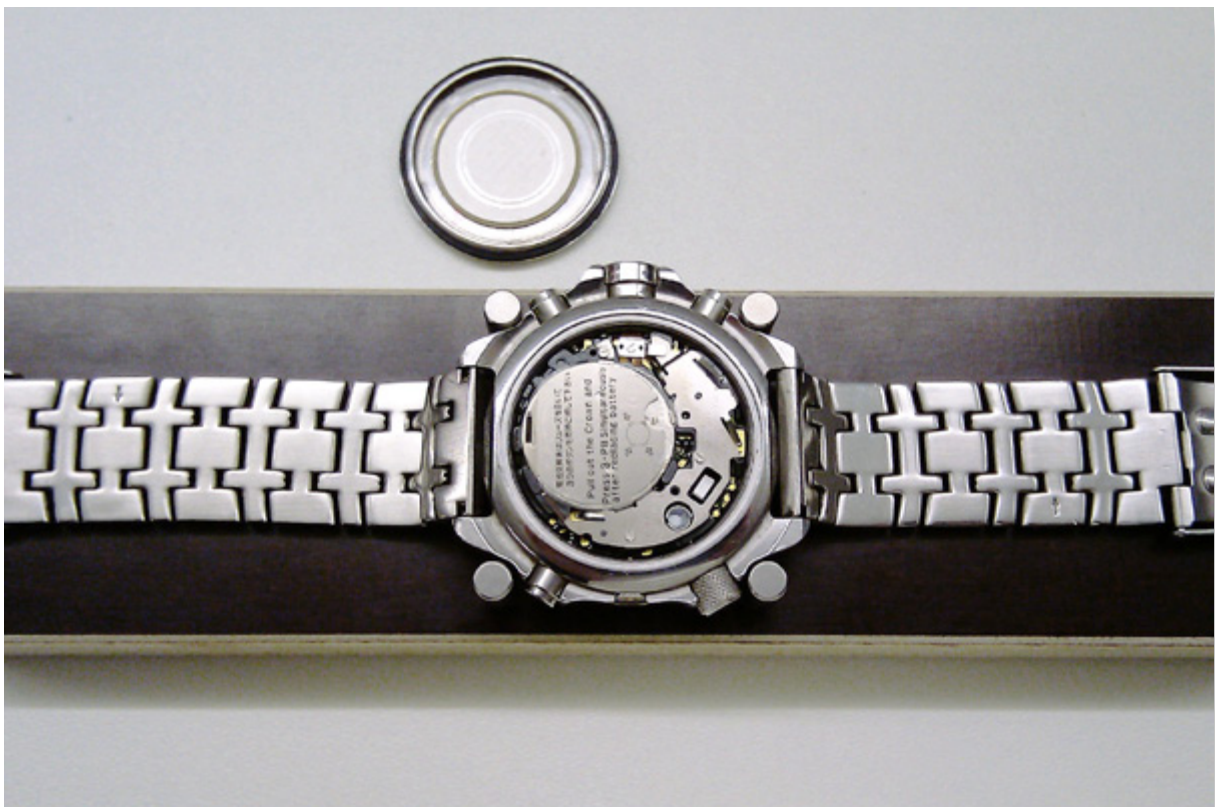Please note: For better control mark a notch with a pen.

2.0 Place wrench horizontally! onto lunette (cogs must grip)
and turn it counterclockwise (lunette fits very tightly).

Lunette Wrench Kit for Aqualand C500

2.1 Unscrew lunette by hand.

3.0 Remove lunette and sealing ring and place it aside.
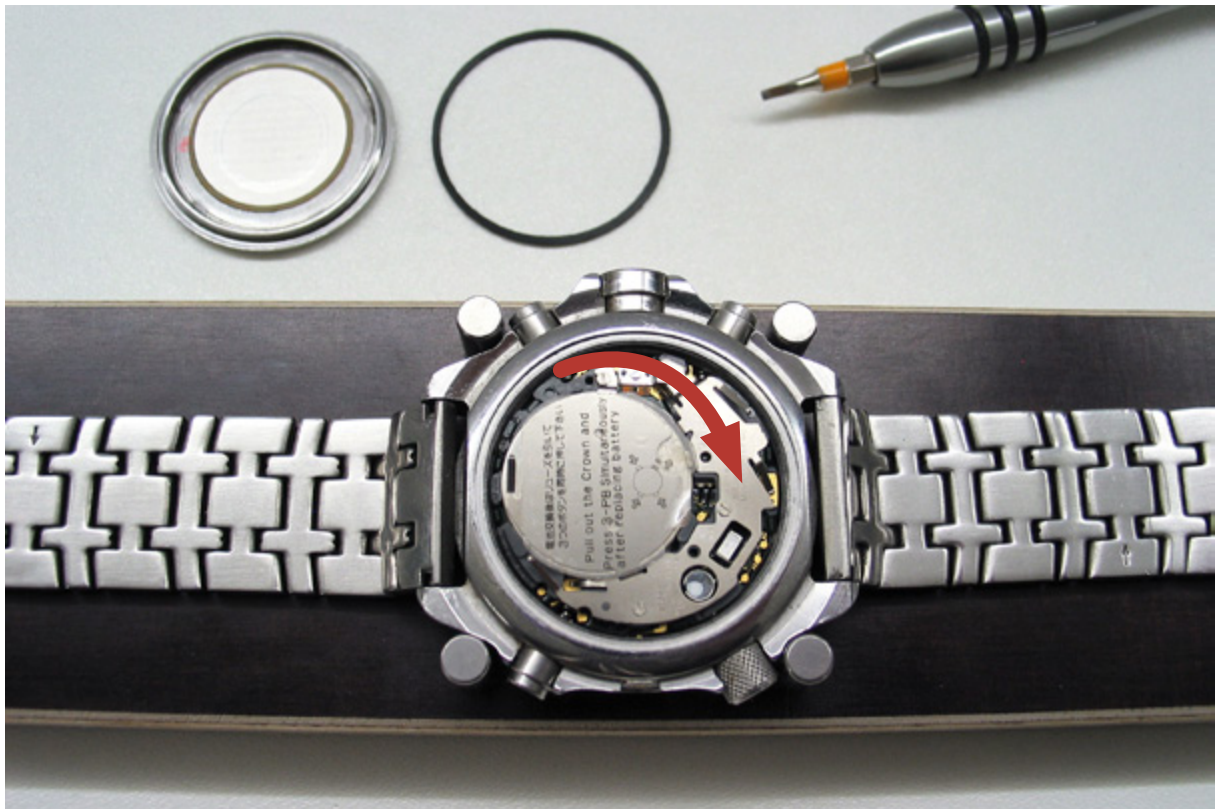
Lunette Wrench Kit for Aqualand C500

3.1 If necessary, clean sealing surface with a lint-free cloth.

4.0 Now, remove screw and battery cover with a screw driver.

Lunette Wrench Kit for Aqualand C500

4.1 Swivel the battery cover clockwise and remove the cover without using a tool.

4.2 Remove the old battery. Please don't throw it in the household waste but dispose of it by using public waste collection points.

Lunette Wrench Kit for Aqualand C500

5.0 Use the tip of a lint-free cloth to clean the sealing's bed.
Don't use a tool!

5.1 To avoid any soilings, don't touch the battery with your fingers. Use a clean cloth or gloves.

Lunette Wrench Kit for Aqualand C500

6.0 Insert new battery with the +pole and inscription pointing upwards.

6.1 Install teh battery cover beginning with the side opposite the screw. Then tighten screw for the battery cover by turning it clockwise. Be careful not to use too much power.
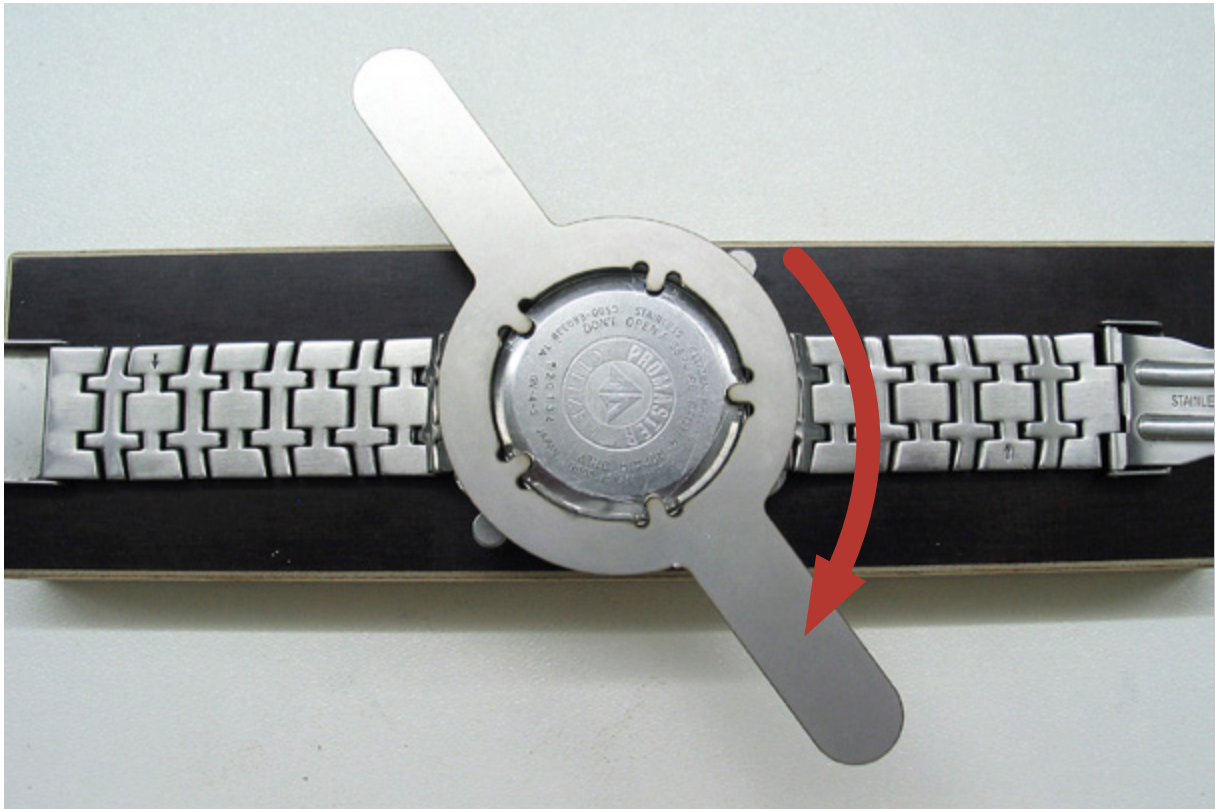
Lunette Wrench Kit for Aqualand C500

7.0 Double check if housing and cover are completely clean. Sealing ring must be placed onto cover free of grease and dust.

7.1 Now place lid back onto housing then tighten it by turning it clockwise by hand.

Lunette Wrench Kit for Aqualand C500

8.0 Place wrench tool horizontally! onto lunette. (cogs must grip)

8.1 Firmly tighten lunette by turning it cclockwise back into its original position. It's normal to have a new position that differs 3 to 5 mm from the original position as the new sealing is thicker.
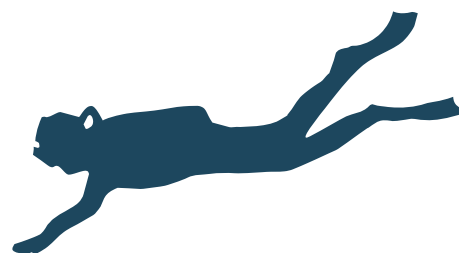
Lunette Wrench Kit for Aqualand C500

9.0 Now set the watch: 1) Open crown counterclockwise 2) and pull it out.
3) Then press the 3 buttons simultaneously.

9.1 Then 1) bring down crown, 2) tighten it and set time.

Content

smartinterface

Publisher	Technisches Büro Kühnhold Ehestorfer Weg 155 21075 Hamburg · Germany
	http://www.smartinterface.de · info@smartinterface.de
Copyright	All images and text in this instruction manual, as well as the instruction manual itself are copyright protected, any further use must be approved in writing by www.smartinterface.de.
Copyright and labeling	All brands and trademarks specified within the description and, where applicable, protected by a third party are subject without restriction to the terms and conditions of the respectively valid right to use a symbol and the ownership rights of each registered owner. The mere mention thereof shall not be construed to represent that the trademarks are not protected by third party rights! The brand names and trademarks used in this documentation are the property of the respective rights owners and are used here only for descriptive purposes.
Disclaimer	The devices, tools and interfaces were thoroughly tested prior to the delivery. Connection, use and operation shall be at your own risk. No liability shall be assumed for damage or loss of data or lack of water-proofness.
Recycling	European Union – Disposal information: This symbol indicates that this product must be disposed of pursuant the valid legal provisions and separated from domestic waste. Bring this product to an official collection point for disposal. Products can be brought to some collection points for disposal free of charge. Separate collection and recycling conserves raw material reserves and ensures compliance with all regulations for the protection of health and the environment when recycling the product.

CE RoHS✓

WEEE-Reg.-Nr. DE82497460